

Eminent EM4553

Handleiding instellen DHCP op de Eminent EM4553.



1. Inloggen op de router.

Om in te kunnen loggen op de router opent u de webbrowser en gaat u naar het volgende adres: <http://192.168.8.1>

Er wordt gevraagd om een gebruikersnaam en wachtwoord om in te loggen op de router. Hier vult u bij Gebruikersnaam en Wachtwoord "admin" in.

U kunt nu kiezen voor "Setup Tool"



2. De verbinding instellen

U klikt nu op "Internet Setup".
Deze stelt u exact in als het onderstaande plaatje.

The screenshot shows the configuration interface for an Eminent EM4553 Wireless N Router. The page title is "EMINENT EM4553 Wireless N Router". In the top right corner, there are "Refresh" and "Save" buttons. On the left, a "Config Explorer" sidebar lists: Basic Setup, Status Summary, Internet Setup (selected), Wireless Setup, Firmware Upgrade, and Advanced Setup. The main content area is titled "Internet Setup" and contains the following options:

- DHCP User (FTTH, Optic LAN, Cable Modem, VDSL, LAN, IP ADSL)
- PPPoE User(ADSL)
- Static IP User
- PPTP User

Below these are several checkboxes and input fields:

- MAC Address Clone (with a "Search MAC address" button)
- Restart DHCP client if the physical WAN link is reconnected.
- MTU (with a text input field containing "1500")
- Set DNS server manually

At the bottom, there are two rows of IP address inputs:

- Primary DNS: 62 . 45 . 45 . 45
- Secondary DNS: 62 . 45 . 46 . 46

An "Apply" button is located at the bottom right of the configuration area.

U klikt nu op "Apply" om de instellingen op te slaan.

3. Draadloos configureren

U klikt op "Wireless Setup"

U stelt het menu in volgens onderstaand:

Operation	Start
SSID	voer een nieuwe naam in. Deze naam is niet geheim maar zorg er wel voor dat deze voor u herkenbaar is.
Mode	"B,G,N"
Region	"Europe"
Channel	6,11 of 13
SSID Broadcast	"ON"

WMM	"OFF"
Authentication	WPAPSK/WPA2PSK
Encryption	TKIP
Encryption Key	Voer hier een geheim wachtwoord in en bewaar deze goed. Deze heeft u nodig om elke computer afzonderlijk te verbinden.

The screenshot shows the configuration interface for an Eminent EM4553 Wireless N Router. The page title is "EMINENT EM4553 Wireless N Router". There are "Refresh" and "Save" buttons in the top right corner. On the left, there is a "Config Explorer" menu with options: Basic Setup, Status Summary, Internet Setup, Wireless Setup (highlighted), Firmware Upgrade, and Advanced Setup. The main content area is titled "Wireless Setup" and contains the following configuration options:

- Operation: Start Stop
- SSID: Eminent Mode: B,G,N
- Region: Europe Channel: 13 [2.472 GHz] (with a "Search the best channel" button)
- Operation mode: SSID Broadcast ON OFF; WMM ON OFF
- Authentication: WPAPSK/WPA2PSK
- Encryption: Disable WEP64 WEP128 TKIP AES TKIP/AES
- Encryption key: wachtwoord

An "Apply" button is located at the bottom right of the configuration area.

U klikt nu op "Apply" om de instellingen op te slaan.

De router is nu geconfigureerd en klaar voor gebruik.